

Copyright © Huawei Technologies Co., Ltd. 2011. All rights reserved.

Trademarks and Permissions



HUAWEI and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, product, service and company names mentioned are the property of their respective owners.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Contents


1 Getting to Know Your Phone	1
Your Phone	1
Keys and Functions	2
Screen Icons	3
2 Getting Started	4
Installing the SIM Card and the Battery	4
Removing the Battery and the SIM Card	4
Installing and Removing a microSD Card	4
Charging the Battery	5
Calibrating the Screen	5
Mass Storage	6
Phone Lock	6
PIN and PUK	6
Switching Between Profiles Automatically	7
Locking the Screen and the Keypad	7
3 Voice Services	8
Making a Call	8
Answering a Call	8
4 Text Entry	9
Changing the Text Input Mode	9
Text Entry Screen	9
Entering Letters	11
Entering Numbers	11
Entering Symbols	11

5 Messaging	12
Writing and Sending a Text Message	12
Writing and Sending a Multimedia Message	12
6 Phonebook	13
Creating a Contact	13
Searching for a Contact	14
Setting the Preferred Storage	14
7 Camera	14
8 Video Camera	15
9 Sound Recorder	16
10 Media Player	16
Creating a New Playlist	17
Adding Audio or Video Files to a Playlist.....	17
Playing an Audio or Video File	17
11 FM Radio	18
12 Network Services	18
13 STK	19
14 Bluetooth.....	19
Transferring Data	20
Connecting to a Bluetooth Headset.....	20
15 Warnings and Precautions.....	22

1 Getting to Know Your Phone

Your Phone

The following figure shows the appearance of your phone and is for your reference only.

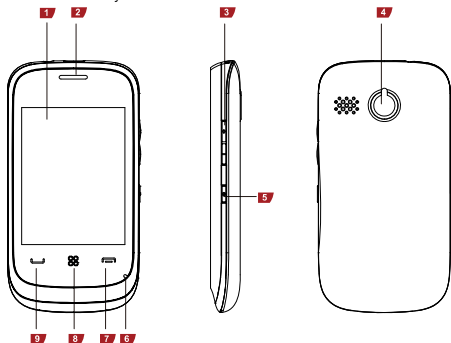

- | | | | |
|---|-------------------|---|-----------------|
| 1 | Screen | 6 | Microphone |
| 2 | Earpiece | 7 | End key |
| 3 | Volume/Scroll key | 8 | Menu key |
| 4 | Camera | 9 | Call/Answer key |
| 5 | Power key | | |

Keys and Functions

Press ...	To ...
	• Make a call. • Answer a call. • View call logs in standby mode.
	Access the main menu.
	• End a call. • Return to standby mode.
	• Scroll between options. • Adjust the volume in standby mode, during a call, while media is playing, or when listening to FM radio programs.
	• Power on or off the phone. • Lock the keypad in standby mode.


Screen Icons

Icon	Indicates ...
	Battery power level.
	Keypad locked.
	MicroSD card inserted.
	Earphone inserted.
	New text messages.
	Missed calls.
	Alarms enabled.
	Bluetooth enabled.
	General profile activated.
	Meeting profile activated.
	Outdoor profile activated.
	Silent profile activated.
	My profile activated.

2 Getting Started


Installing the SIM Card and the Battery

When installing the subscriber identity module (SIM) card, ensure that its golden contacts area is facing down, and that the beveled edge of the SIM card aligns with that of the SIM card slot.

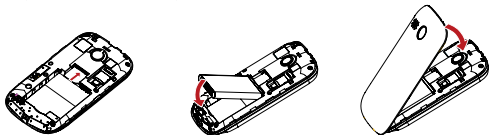

Removing the Battery and the SIM Card



Before removing the battery and the SIM card, ensure that your phone is powered off.

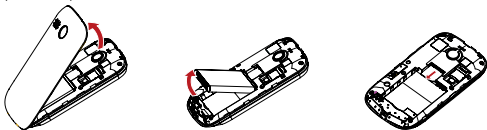

Installing and Removing a microSD Card

 Before installing or removing a microSD card, power off the phone. Once the phone is powered on, it will indicate whether the microSD card has been installed correctly.

Your phone's memory capacity is expandable using a microSD card. When installing a microSD card, face its golden contact area down.

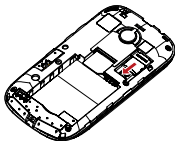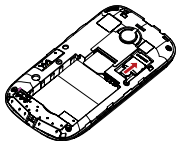

Charging the Battery

1. Connect the larger end of the USB cable to the charger.
2. Connect the charger to a power socket.
3. Connect the small end of the USB cable to the phone's charger jack (USB port).
4. Wait until the battery is fully charged.

While the battery is charging, the charging icon is animated. When the charging icon animation stops, the battery is fully charged.

5. Unplug the charger from the power socket and then the USB cable from the phone.

Calibrating the Screen

Once calibrated, the phone can respond accurately to your fingertip's touch on its screen.

1. In standby mode, tap the  key to access the main menu, and then select **Settings** > **Pen calibration**.
2. During the calibration, a sequence of  icons are displayed on the screen. Tap each  that appears on the screen to complete the calibration.



During the calibration, tap every  accurately to ensure that the phone can respond to your tapping and text entry correctly after the calibration.

Mass Storage

When the phone is connected to a personal computer (PC) using a USB cable, **Mass storage** is displayed on the phone screen.

In **Mass storage** mode, you can manage the files stored on the phone and its memory card from the PC's file manager utility.

Phone Lock

The phone lock protects your phone from unauthorized use. The preset phone unlock code is **1234**. By default, the phone lock is disabled. Once the phone lock is enabled, you are required to enter the phone unlock code each time you power on the phone.

To enable the phone lock: in standby mode, tap  key to access the main menu and select **Settings > Security settings > Phone security > Phone lock**. Enter the phone unlock code and tap **OK**.

To change the preset phone unlock code to any numeric string of

four to eight digits: in standby mode, tap the  key to access the main menu and select **Settings > Security settings > Phone security > Change password**.



If you forget the phone unlock code, contact your service provider.

PIN and PUK

The personal identification number (PIN) protects your SIM card from unauthorized use. The PIN unblocking key (PUK) unlocks a blocked PIN. Both the PIN and PUK are provided with the SIM card. For details, contact your service provider.



If on three consecutive attempts you enter the PIN incorrectly, the phone prompts you to enter the PUK. If on ten consecutive attempts you enter the PUK incorrectly, the SIM card will become permanently invalid. In this case, contact your service provider for a new SIM card.

Switching Between Profiles Automatically

You can configure your phone to activate different profiles at different time.

1. In standby mode, tap the  key to access the main menu and select **Profiles > Profile auto switch**.
2. Select an alarm.
3. Set the alarm status, alarm time, repetition days, and then assign a profile to the alarm.
4. Tap **Done** then **Yes** to save the settings.

Locking the Screen and the Keypad

In standby mode, tap the  key to access the main menu and select **Settings > Security settings > Auto keypad lock**. On the **Auto keypad lock** screen, select between **Off**, **5 sec**, **30 sec**, **1 min**, and **5 min** to enable the automatic keypad lock. The screen will lock after the phone is inactive for the time period selected.

To lock the screen and the keypad manually, press the end key.



To unlock the screen and the keypad, slide from left to right.



3 Voice Services

Making a Call

1. In standby mode, tap  at the bottom of the screen to access the on-screen keypad.
2. Enter a phone number, or tap  to access the **Contacts** screen to select a desired contact number.
 - To make an international call, quickly tap the * key twice to enter a plus sign (+), and then enter the country or region code, area code and phone number in sequence.
 - To call an extension number, enter the phone number, then **p** (tap the * key three times), and extension number in sequence.
3. Tap  or  to dial the number.



You can also make a call from the **Call log**, **Contacts**, or **Messaging** screen.

Answering a Call

When there is an incoming call, you can:

- Tap **Answer** or  to answer the call.
- Tap **Silent** to mute the ringtone.
- Tap **Reject** or  to reject the call.

4 Text Entry


Changing the Text Input Mode

The current text input mode indicator is displayed in the upper left corner of the screen. Tap  on the QWERTY/Alphanumeric input screen to switch between text input modes.

Indicator	Text Input Mode
ABC and abc	Multi-tap input mode
sABC and sabc	Predictive input mode
123	Number input mode

Text Entry Screen

1. On the QWERTY input screen, you can:

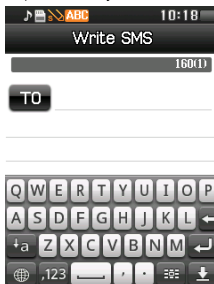

- Tap  once to clear the last entered character, or touch and hold  to clear all entered characters.
- Tap  to move the cursor to the next line.
- Tap  to hide the keypad.
- Tap  to access the alphanumeric input screen.
- Tap  to access the symbol/number keypad.
- Tap  to access the **Input method** screen from where you can select a different input method.
- Tap  to switch between upper and lower case.

2. On the alphanumeric input screen, you can:



- Tap  once to clear the last entered character, or touch and hold  to clear all entered characters.
- Tap  to access the number keypad.
- Tap  to switch between upper and lower case.
- Tap  to access the QWERTY input screen.
- Tap  to hide the keypad.
- Tap  to access the **Input method** screen from where you can select a different input method.
- Tap  to access the symbol keypad.

Entering Letters

- On the QWERTY input screen, enter letters by tapping the key labeled with the desired letters.
- On the alphanumeric input screen, tap the key that carries the desired letter, and then select the desired letter from the displayed options.

Entering Numbers

- On the QWERTY input screen, tap  to access the number/symbol keypad and then enter desired numbers.
- On the alphanumeric input screen, tap  to access the number keypad and then enter desired numbers.

Entering Symbols

- On the QWERTY input screen, tap  to access the symbol/number keypad where you can find commonly used

symbols. If the symbol you want is not shown, tap  to access the complete symbol keypad where you can find all available symbols.

- On the alphanumeric input screen, tap  to access the symbol keypad. There are four pages of symbols on the symbol keypad and you can tap  or  to turn pages.

5 Messaging

Writing and Sending a Text Message

1. In standby mode, tap  at the bottom of the screen to access the **Messaging** screen, and then tap **Write message**.
2. Enter the phone number of one or more recipients in the recipient bar, or tap  to select one or more recipients from your saved **Contacts**.
3. Edit the message content.
4. Tap  to send the message.

Writing and Sending a Multimedia Message

1. In standby mode, tap  at the bottom of the screen to access the **Messaging** screen, and then tap **Write message**.
2. Tap **Options** and select **Switch to MMS**.
 - If you tap **Add picture**, **Add sound**, or **Add video**, the message will automatically switch to a multimedia message.
 - If you tap **Header info**, and edit **Cc**, **Bcc** or **Subject**, the message will also automatically switch to a multimedia message.

3. Enter the phone number of one or more recipients in the recipient bar, or tap  to select one or more recipients from your saved **Contacts**.
4. If **Cc** or **Bcc** has been selected, enter the phone numbers of one or more recipients as required.
5. If **Subject** has been selected, enter the subject of the message.
6. Edit the message contents.

You can add pictures, audio clips, video clips, text templates, attachments, contact numbers, contact names, or bookmarks by

tapping .

7. Tap  to send the message.

6 Phonebook

Creating a Contact

In standby mode, tap  at the bottom of the screen to access the **Contacts** screen.

- To add a contact to your SIM card:
 1. On the **Contacts** screen, tap **Add new contact**.
 2. Edit **Name** and **Number**.
 3. Select **Options > Save > Yes**.
- To add a contact to your phone:
 1. On the **Contacts** screen, tap **Add new contact**.
 2. Edit the **Name**, **Number**, **Email address**, **Caller picture**, and **Caller ringtone**.
 3. Select **Options > Save > Yes**.

Searching for a Contact

1. In standby mode, tap  at the bottom of the screen to access the **Contacts** screen.
2. Enter the first letter of the contact name in the searching bar. Contacts whose name starts with that letter will be displayed.
3. Tap  to hide the keypad and find the desired contact from the list.


Setting the Preferred Storage

1. In standby mode, tap  at the bottom of the screen to access the **Contacts** screen.
2. On the **Contacts** screen, select **Options > Phonebook settings > Preferred storage**.
3. On the **Preferred storage** screen, select between **SIM**, **Phone** or **Both**.

7 Camera

In standby mode, tap  key to access the main menu and then select **Camera**.

On the **Camera** screen, you can:


- Tap  to access the **Options** screen to view photos or to configure settings.
- Tap  to take a picture.
- Tap  to adjust the brightness.
- Tap  to zoom in or zoom out.

- Tap  to set the image size.
- Tap  to set the image quality.
- Tap  to set the image effects.
- Tap  to adjust the white balance.
- Tap  to select the scene mode.
- Tap  to set the delay timer.
- Tap  to set continuous shot.
- Tap  to exit the camera.

8 Video Camera

In standby mode, tap  key to access the main menu and then select **Video camera**.

On the **Video camera** screen, you can:

- Tap  to access the **Options** screen to configure settings.
- Tap  to start recording.
- Tap  to adjust the brightness.
- Tap  to zoom in or zoom out.
- Tap  to set the video quality.
- Tap  to activate or deactivate night mode.

- Tap  to adjust the white balance.
- Tap  to mute or unmute the microphone for audio recording.
- Tap  to exit the video camera.

9 Sound Recorder

In standby mode, tap the  key to access the main menu and then select **Applications > Sound recorder**.

On the **Sound recorder** screen, you can:

- Tap  to access the **Options** screen to configure settings.
- Tap  to start recording.
- While recording, you can tap  to pause, and tap  to stop the recording.
- Tap  to view the list of saved recordings.
- Tap  to exit the sound recorder.
- Tap  to play the audio saved.

10 Media Player

You can play audio or video files stored on the phone or its memory card using the media player, or add audio or video files to a user-defined playlist.



In standby mode, tap the  key to access the main menu and then select **Media player**.

Creating a New Playlist

1. On the **Media player** screen, tap **My playlists**.
2. Select **Options > New** and name the playlist.
3. Select **Options > Done** to save the playlist.

Adding Audio or Video Files to a Playlist

1. On the **Media player** screen, tap **My playlists** and select the playlist to which you want to add audio or video files.
2. Select **Options > Open** then **Add > Phone/Memory card** to select an audio or video file.
3. Tap **OK** to add the selected audio or video file to the playlist.

Playing an Audio or Video File

1. On the **Media player** screen, tap **My playlists** and select a desired playlist.
2. Select **Options > Open** then the audio or video file you want to play.
3. Select **Options > Play** to play the selected file.

On the playing screen, you can:

- Tap  to access the **Options** screen to configure settings.
- Tap  or  to switch to the previous or next file.
- Touch and hold  or  to rewind or fast-forward the file.
- Tap  to start playing the file.
- Tap  to pause the playback.

- Tap  to stop the playback.
- Tap  to access full-screen mode.
- Tap  to exit the media player.

11 FM Radio

After the FM radio is turned on, the headset cable also functions as an antenna. To ensure good radio reception, do not disconnect the headset from the phone or severely bend the headset cable.

In standby mode, tap the  key to access the main menu and then select **FM**.

On the **FM radio** screen, you can:

- Tap  to access the **Options** screen to configure settings.
- Tap  to turn the FM radio on or off.
- Tap  or  to switch to the previous or next channel in the saved channel list.
- Tap  or  to adjust the frequency by 0.1 MHz.
- Tap  to record the current radio program.

12 Network Services

Using your phone, you can access Wireless Application Protocol (WAP) sites and use WAP-based services. To browse WAP pages, you need to subscribe to the corresponding service from your service provider and configure your phone's relevant settings.

In standby mode, tap  at the bottom of the screen to access the **Internet service** screen.

- Tap **Settings > Data account** to select your service provider.
- Tap **Homepage** to access the homepage.
- Tap **Bookmarks** to select a WAP site from the list, and then tap **Options > Go to**.
- Tap **Input address** to enter an address, and then tap **Options > Go to**.
- Tap **Recent pages** to view WAP pages that you have recently browsed.

13 STK

In standby mode, tap the  key to access the main menu and then select **STK**.

The SIM Tool Kit (STK) function is available only if your service operator provides it. It is a value-added service that allows you to send text messages, read news, and use other applications. For details, contact your service operator.

14 Bluetooth

Your phone supports Bluetooth. You can transfer data between your phone and other Bluetooth devices, and talk on the phone using a Bluetooth headset.

In standby mode, tap the  key to access the main menu and then select **Bluetooth**.

Transferring Data

1. On the **Bluetooth** screen, set **Power** to **On**.
2. Select **My device > Search new device** to search for other Bluetooth devices and pair a device with your phone.



When you pair your phone with a device for the first time, a password is required for authentication. After your phone and another device are paired, data can be transferred between the two devices.

Connecting to a Bluetooth Headset

1. On the **Bluetooth** screen, set **Power** to **On**.
2. Tap **Search audio device**.
3. Select the desired Bluetooth headset, and tap **Pair**.
4. Enter the password for pairing the Bluetooth headset with your phone.

After the Bluetooth headset is connected to your phone, the headset icon is displayed on the standby screen, indicating that you can use the headset.



No Bluetooth headset is supplied in the product package. To use a Bluetooth headset, you must purchase one separately.

The SAR limit adopted by USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 0.964 W/kg, and when properly worn on the body is 1.12 W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

15 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmosphere

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before

using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.

- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.

Prevention of Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device

model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.

- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.700 W/kg, and when properly worn on the body is 0.891 W/kg.

EU Regulatory Conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site
www.huaweidevice.com/certification.

C E 0700

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Version: 01 NO.: 6010644